

Basic CW Keyer Commands

Press and hold the **CW SELECT** button to cycle through CW memories M1...M4 then enter the **SETUP** menu

Command	Sub command	Function	Description
M	<i>P</i>	Play	Listen to the contents of the currently selected memory.
	<i>R</i>	Record	To store a slash character in a message, save it as <i>//</i> .
	<i>/B</i>	Beacon	To have your message automatically repeat at timed intervals, insert the command <i>/B</i> .
	<i>1...4</i>	Select Mem	Send the number 1, 2, 3 or 4 to select a message memory
U	<i>dit or dah</i>	Tune	Tune mode is used to send either a steady carrier (dot paddle) or a series of dits (dit paddle).
B	<i>dit or dah</i>	Beacon delay	The keyer sends the current beacon delay in seconds. Use the paddles to increase or decrease the delay between beacon transmissions from 0 to 99 seconds.
A	<i>dit or dah</i>	Audio Tone	Use the paddles to increase or decrease the audio frequency as desired.
T	<i>dit or dah</i>	Sidetone	The keyer announces the current sidetone setting and waits for input. You can use the dot and dash paddles to switch between Ⓜ (sidetone OFF), Ⓜ (sidetone ON) and Ⓜ (MCW mode).
F	<i>dit or dah</i>	Factory Reset	Keyer sends Ⓜ and waits. If you tap either paddle the keyer will be completely reset to its original settings.

Voice Keyer Setup

Recording

Put the **RECORD** switch to ON. The **REC LED** flashes to indicate the deletion of the entire memory. *Enabling record mode will erase all 4 voice memories!!*

Once clearing is completed, the **PLAY LED** signals, through a Morse K, that recording can be started.

To record a message, press and hold the **PTT** button and while speaking the message, once done release the **PTT**.

Pressing the **PTT** again will record the message into the next memory location. Once done move the **RECORD** switch to **OFF**.

Playback

A short press on a memory button (**M1/M3** or **M2/M4**) will play the first memory location, a long press the second location.

If the **REPEAT** switch is **OFF** then the message will play once.

If the **REPEAT** switch is **ON** then the message will repeat with the gap between playback being set by the **DELAY** control.

Pressing the **PTT** at any time will cancel the playback of the voicekeyer.